

Herculift Independent Radio Receiver: RCV – 1 (GOI)



SPECIFICATION:

Power Input: 7- 24V ACDC

Code Storage: up to 30 transmitter codes

Frequency: 433.92 Mhz, Rolling Code

Transmitter: Any Herculift brand transmitters

Working Condition: Indoor or under covered Only (IP 56)

Antenna: built-in

WIRING AND CONNECTION

Brown Wire: Positive 7 - 24V ACDC power output.

Blue Wire: Earth/Ground (GND) output.

White Wire: Common. (Connecting to the On/Off switch terminal of the operator. I.E. the Wall Button Switch terminal).

Grey Wire: Normal Open (N/O).

Black Wire: Normal Close (N/C).

240V Power Supply: The RVC-1 could also be powered up by plug in an optional Herculift 240V converter as shown above

PROGRAM A TRANSMITTER CODE

- Press the “Learn” button once on the RCV-1 to the red “Learn” lamp is on.
- Press any one button on a Herculift Transmitter for about 2 seconds and the red “Learn” lamp will start to flash. When it stops, the transmitter code is programmed.

Note: The RCV-1 could store up to 30 transmitter code. When the 31st code is programmed, the first stored code will be deleted automatically and so on.

DELETE / REMOVE A PROGRAMMED CODE

Press and hold the Learn button for 8 seconds until the red lamp above the “Learn” button switches off, ALL of the programmed codes are deleted.